



# LM005 WiFi 300Mbps Adapter

Host Controller Interface (HCI) via USB Interface

## USER MANUAL



© All rights reserved.

All trade names are registered trademarks of respective manufacturers listed.

This manual may not be copied in any media or form without the written consent of original maker.

<b>Revision</b>	<b>Date</b>	<b>Changes Description</b>
v1.0	20/02/2017	First revision of this user manual.

## Contents

<b>1. Introduction</b> .....	4
<b>1.1. Features</b> .....	4
<b>1.2. System Requirements</b> .....	4
<b>1.3. Adapter LED</b> .....	4
<b>2. Windows Driver / Utility Installation</b> .....	5
<b>3. MAC OS Driver / Utility Installation</b> .....	7
<b>3.1. Installation Process</b> .....	7
<b>3.2. Uninstalling the MAC OS Driver</b> .....	12
<b>4. Wireless LAN Basics</b> .....	13
<b>5. IP Address</b> .....	14
<b>6. Wireless Network Configuration</b> .....	15
<b>6.1. Utility Icon</b> .....	15
<b>6.2. Client Mode (Default Setting)</b> .....	15
<b>6.3. General Settings</b> .....	16
<b>6.4. Profiling Settings</b> .....	16
<b>6.5. Available Network Settings</b> .....	17
<b>6.6. Status</b> .....	18
<b>6.7. Statistics</b> .....	18
<b>6.8. Wi-Fi Protected Setup</b> .....	19
<b>7. Certification Information</b> .....	23
<b>7.1. Federal Communication Commission Interference Statement</b> .....	23
<b>7.2. Europe – CE/R&amp;TTE Compliance Statement</b> .....	24
<b>8. Glossary</b> .....	26

## 1. Introduction

### 1.1. Features

- WiFi 802.11 b/g/n
- Operates in 2.4 GHz Frequency bands
- Plug and Play (Linux, MAC OSX and Windows XP – 10 compatible)
- Up to 300Mbps Data Transfer Rate
- 2x2 MIMO technology improves data throughput and range over existing 802.11 b/g products
- WPS button (Wi-Fi Protected Setup) for easy and secure establishment in a wireless network.
- 802.11e-compatible bursting and I standards.
- Fully-featured software utility for easy configuration and management
- BPSK, QPSK, 16 QAM, 64 QAM, DBPSK, DQPSK, and CCK modulation schemes.
- WEP, TKIP, and AES, WPA, WPA2 hardware encryption schemes.
- Supports infrastructure networks through an access point and ad-hoc network via peer to peer connections
- Up to 180m range in open space
- FCC and CE/ R&TTE certified solution
- RoHS, REACH and WEEE compliant

### 1.2. System Requirements

Host Operating System	OS Version Number (LM Tested)
Linux	<ul style="list-style-type: none"> <li>• Ubuntu 15.10 (Kernel 4.2.0-16-generic)</li> <li>• Ubuntu 14.04.03 (Kernel 3.13.0-77-generic)</li> </ul>
MAC OSX	<ul style="list-style-type: none"> <li>• OSX 10.11 (El Capitan)</li> </ul>
Windows	<ul style="list-style-type: none"> <li>• Win 10 (32-bit &amp; 64-Bit)</li> <li>• Win 8/8.1 (32-bit &amp; 64-Bit)</li> <li>• Win 7 (64-bit)</li> </ul>

### 1.3. Adapter LED

- LED turns on when the adapter connects with another WiFi adapter or AP.
- LED blinks when the WiFi Adapter is active.


## 2. Windows Driver / Utility Installation

The installation of the driver and utility on the host computer will automatically activate, the autorun installation program after you click the exe application. All adapter drivers for the relevant host operating can be found on our website.

[Click here for downloadable drivers.](#)


### Step 1 :

Download the compatible driver for your host operating system. Choose the Setup Language and click **Next** button.

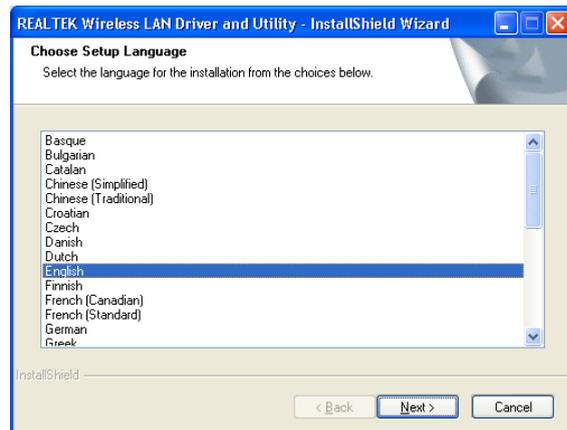


### Step 2 :


Installation descriptions shown. Click **Next** to continue.

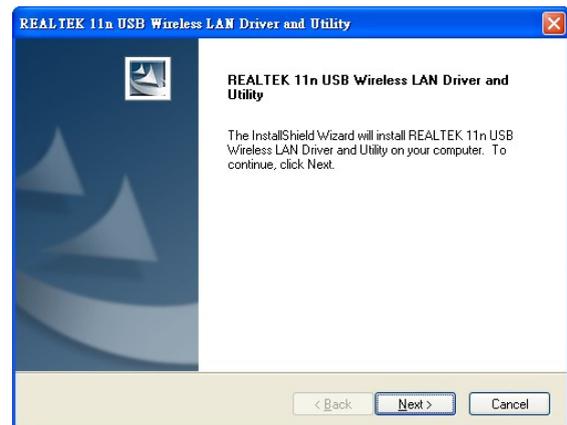


Click **Install** to begin the installation.

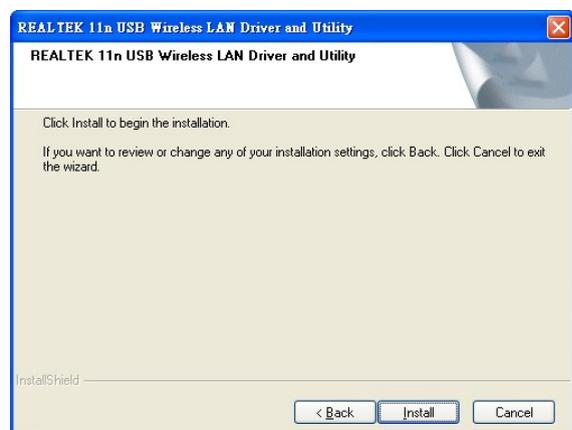


Installing & configuring Realtek utility.

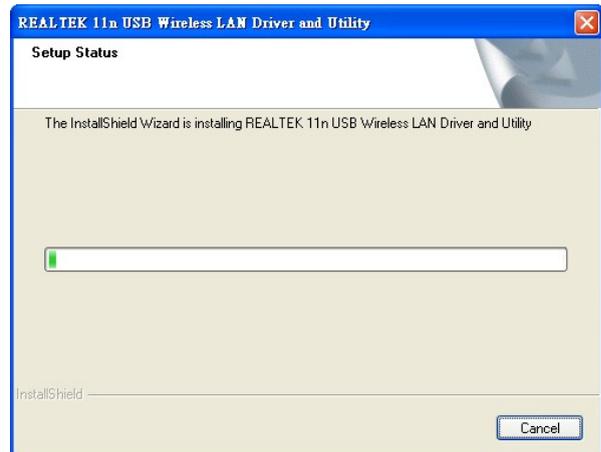

Installing Drivers.

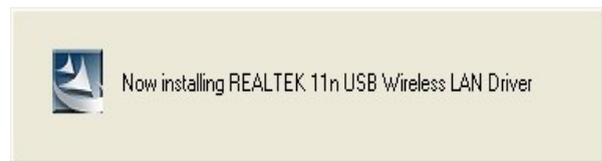

**Step 3 :**  
Click **Finish** to complete installation.

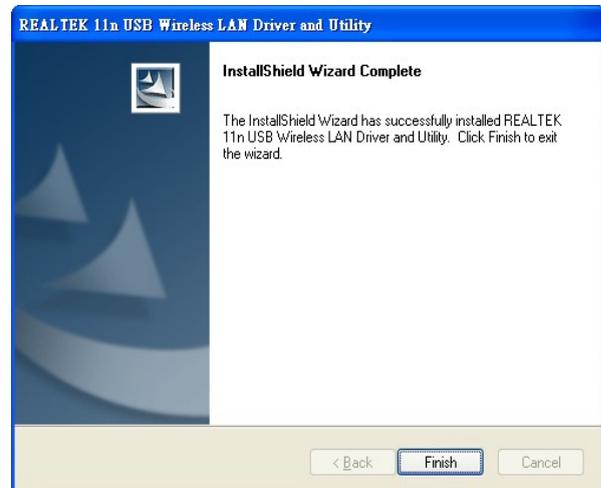

## 3. MAC OS Driver / Utility Installation

### 3.1. Installation Process

Please follow the steps below for setting up the LM005 on MAC host computer:


#### Step 1 :

Download the correct driver for the MAC OS version from LM005 product page.

[Click here for downloadable drivers.](#)

#### Step 2 :

Save the installable file on the MAC

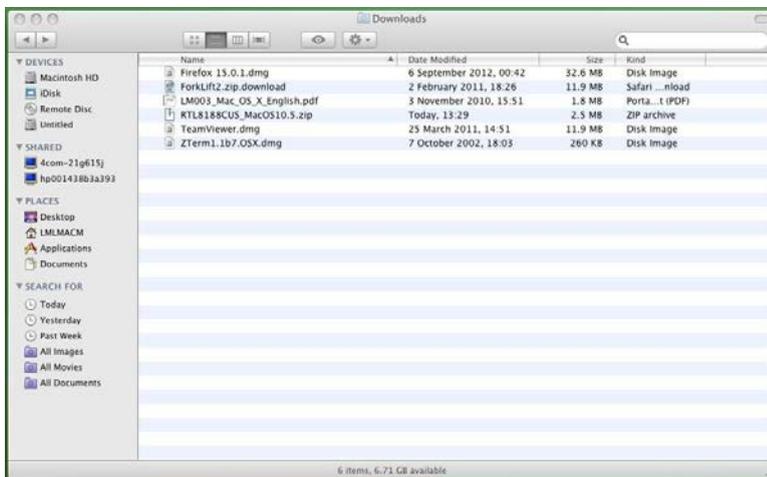

#### Step 3 :

Please ensure there are no other Realtek USB adapter drivers already installed on your MAC. Any existing drivers may conflict with the new driver and the USB adapter may not be detected. If an existing driver is found then uninstall it from your MAC.

#### Step 4 :

Please ensure the Ethernet interface such as Airport or physical LAN connection is enabled.

**Step 5 :**

Make sure the LM005 is unplugged from the USB port. Unzip the driver file and start the installation.


**Step 6 :**

Wait for the installation to finish before restarting the machine



**Step 7 :**

Once the MAC has restarted, connect the LM005 adapter to the USB port. The Wireless Network Utility will launch automatically and a message will appear to enable WLAN card.

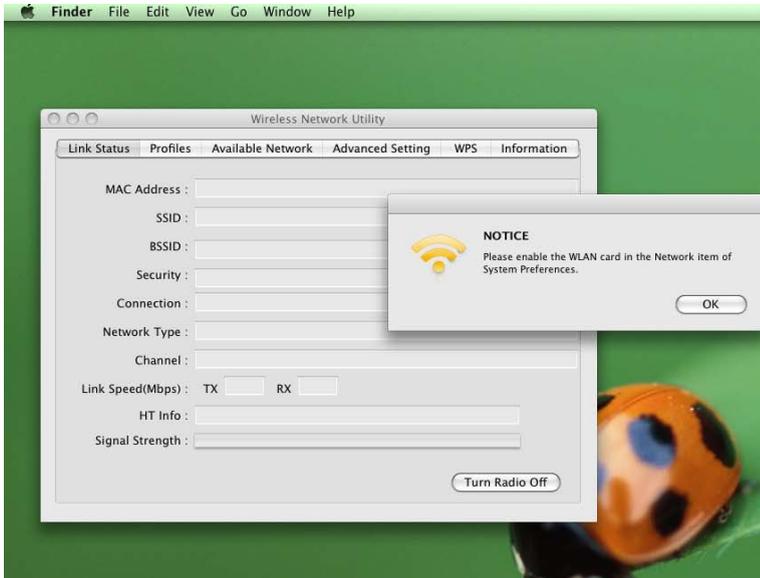


**Step 8 :**

Open the **Network Preferences** and a pop up message will appear stating a new network interface has been detected. A new network interface e.g. **en2** or **en3** will appear in the list of the network interfaces.



**Step 9 :**


Click **OK** to the pop up message. Select the new Ethernet interface created (en2, en3 or similar) then press **Apply**. This enables the selected Ethernet interface and the **Wireless Network Utility** detects the LM005. The MAC address of the LM005 and link status is updated on the **Wireless Network Utility** window.

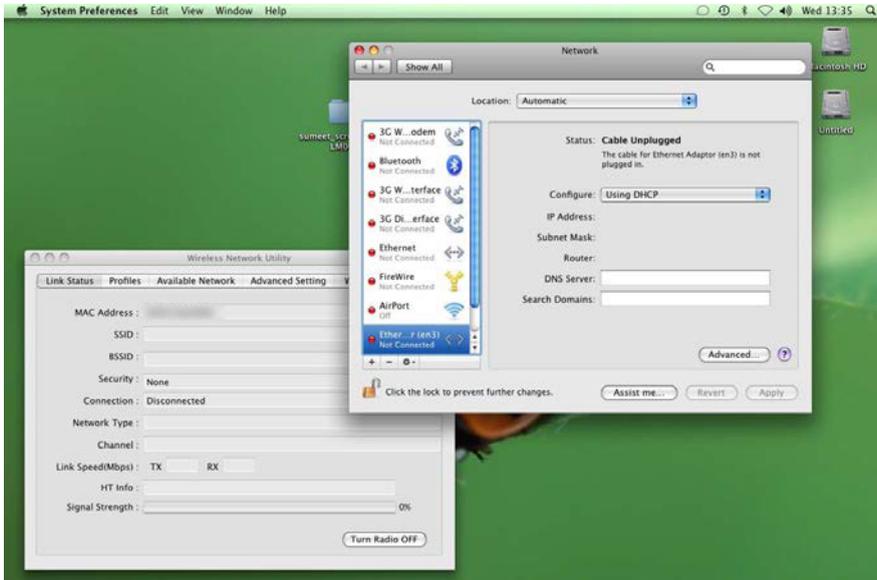
**Step 10 :**

Check the **Available Network** section on the **Wireless Network Utility** and connect to the wireless network.


**Step 11 :**

Once the network has connected, press **Add to Profile** to save the network and it will connect automatically.

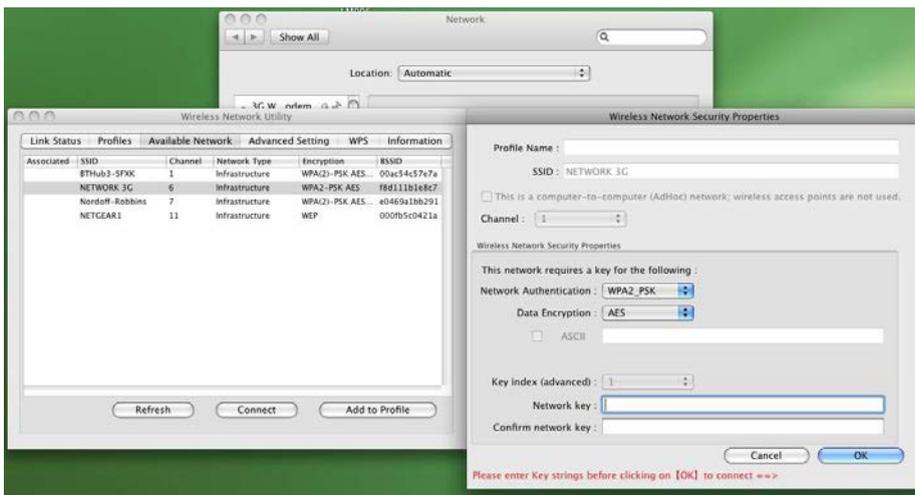

**Step 12 :**

Once the network is connected, the LM005 network interface should appear as connected in the **Network Preferences** and on the **Link Status** window, the signal strength, connection status and statistics should be shown

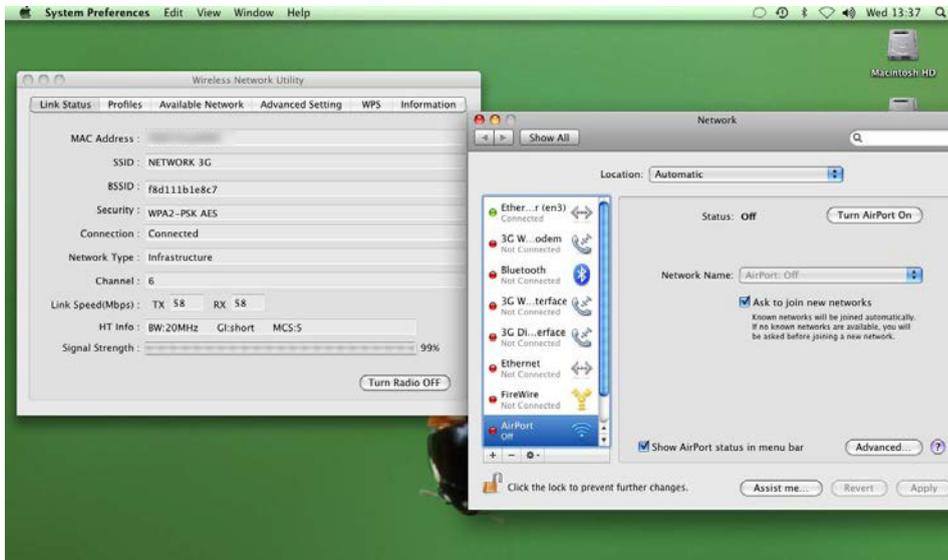


### 3.2. Uninstalling the MAC OS Driver

Please follow the below steps to uninstall the LM005 driver on a MAC host computer.


#### Step 1 :

Run the uninstall.command script in the same folder the driver is extracted.

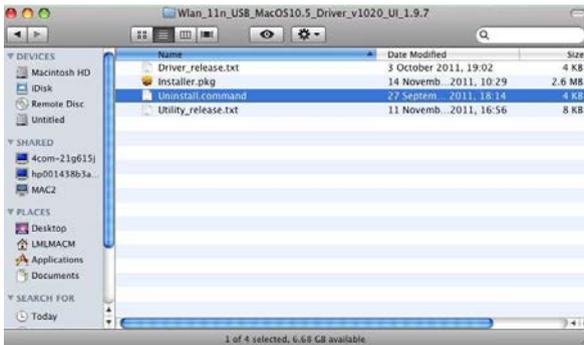

#### Step 2 :

You would need the root password to uninstall the driver. Enter the password when prompted in the terminal

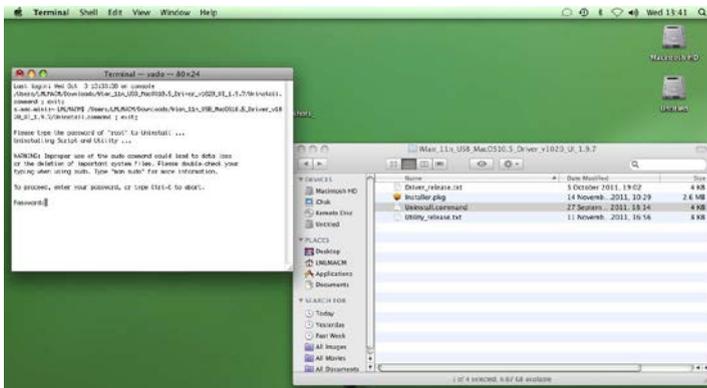

#### Step 3 :

Once the password is provided the script will uninstall the driver.


#### Note :

Please DONOT delete the network interface (en2, en3 or similar) created in the network preference because MAC does not recreate this interface when the driver installation is executed the next time. It may become difficult to get the LM005 working if the network interface is deleted.


## 4. Wireless LAN Basics

Wireless LAN network defined by IEEE 802.11b/g/n standard committee can be configured in the following modes:

- Ad Hoc (Point-to-point) wireless LAN.
- Infrastructure wireless LAN.

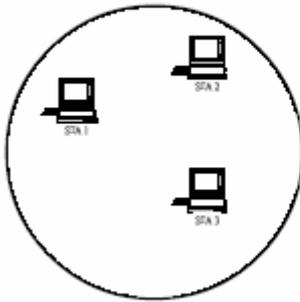

**Ad Hoc** Wireless Network

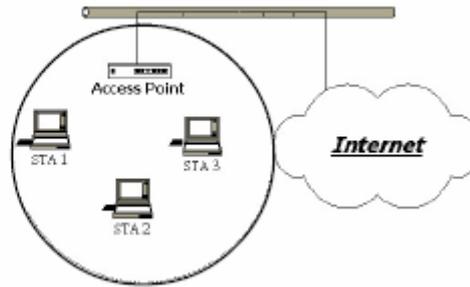

**Infrastructure** Wireless Network

**Ad Hoc** network is a group of PCs installed with wireless LAN cards, this group of PCs is called a BSS (Basic Service Set). PCs in this group can use their wireless LAN cards to communicate with each other, but cannot connect to the **Internet**.

The main difference between **Infrastructure** wireless networks and **Ad Hoc** wireless networks is that the PCs in an **Infrastructure** wireless network can access the resource in the Internet through an **Access Point**.

Depending on your application requirements, you can easily set up your PC's network to be an "**Ad Hoc**" or "**Infrastructure**" wireless network. Generally speaking, if your network includes an **Access Point**, we recommend setting your network as an "**Infrastructure**" network to allow connectivity to the **Internet**.

## 5. IP Address

To use this WiFi adapter with a computing device, the host device must be equipped with a USB interface. All drivers and supporting software for the adapter must be installed and configured first.

Ask your system administrator for the following information, which might be needed during the driver installation:

- Wireless Client Name
- Wireless SSID
- The host's unique client and workgroup name

For your network account you will need the following:

- Username
- Password
- IP address
- Gateway address
- Subnet mask (if you're not using a DHCP client)

Any computer on a network is identified by a unique IP address. There are two methods to assign an IP address to a computer on a TCP/IP network:

- Static IP addressing
- Dynamic IP addressing (DHCP Client)

In networks with static IP addressing, the network administrator manually assigns an IP address to each computer. Once a static IP address is assigned, a computer uses the same IP address every time it reboots and logs onto the network. You may manually change the IP address in the **Network Properties dialog box**. Networks using static IP addresses is easy to set up and do not require additional network management software.

In networks with dynamic IP addressing, a DHCP server in the network dynamically assigns IP addresses to all clients every time they log onto the network. Networks using dynamic IP addresses require setting up and running a DHCP Server.

## 6. Wireless Network Configuration

The LM005 uses its own management software. All functions controlled by users are provided by this application. When you connect the adapter via USB to your laptop or desktop, an icon should appear in the Windows System Tray automatically.

### 6.1. Utility Icon

Client mode utility running but no adapter plugged in



Client mode utility running and adapter connected to scan available networks.



Client mode utility running and adapter cannot scan any access points



AP mode utility running.



### 6.2. Client Mode (Default Setting)

#### Wireless Device Control:



Show Tray Icon – Show or hide icon in system tray.

Radio Off – Stop wireless signal.


Disable Adapter – Stop wireless device

### 6.3. General Settings

Once device is setup, double click on that icon and the configuration window will pop up as shown. It shows the current connected network. The signal strength and link quality are also displayed.

The status bar displays the quality and strength of the link between the node and its Access Point. Link Quality is a measurement of the receiving and transmitting performances over the radio.

**Network Address** displays current MAC Address, IP Address, Subnet Mask address and Gateway address.

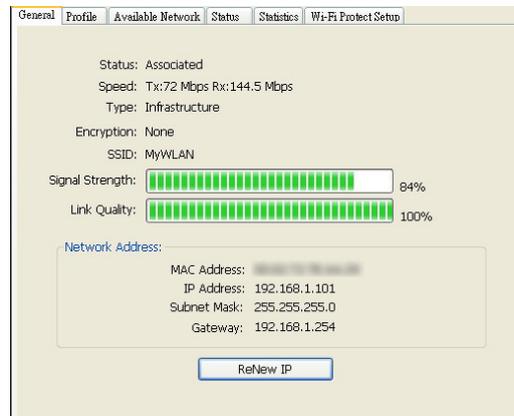


Click **Renew IP** button to refresh the IP address leased from the connected wireless AP.

### 6.4. Profiling Settings

In profile tab, you can


**Add, Remove, Edit, Duplicate** and **Set Default** to manipulate profile content manually. Strongly recommend using profile after you check **Available Networks**

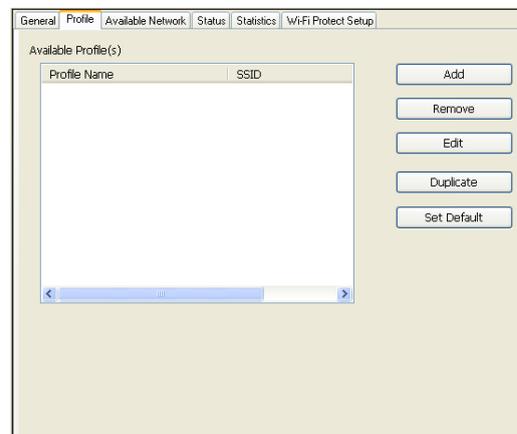


## 6.5. Available Network Settings

Click **Available Network** tab and it will show all available networks that the radio reaches. Select the SSID & BSSID you want to connect with.

Click **Refresh** button to rescan available networks.

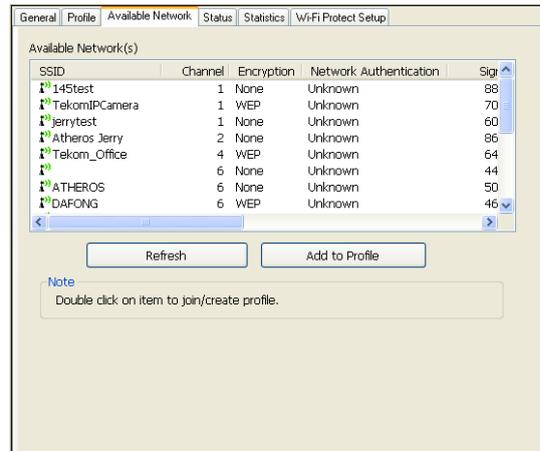

Select one of SSIDs, and click **Add to Profile** to create profile that can be configured with more wireless parameters. In this tab you can edit your profile name and configure wireless security such as WEP, WPA, WPA2, 802.1x ...etc. After finishing setup, click **OK** button to save configuration

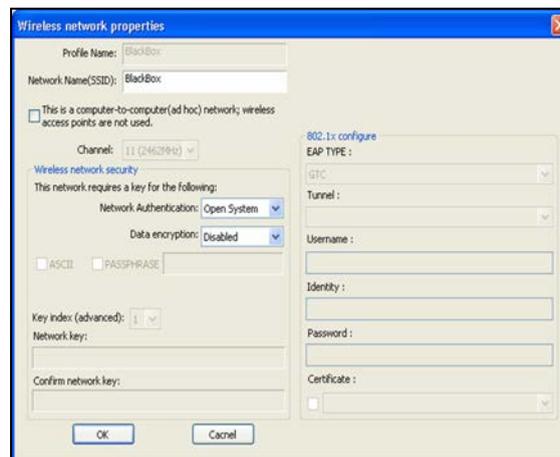





## 6.8. Wi-Fi Protected Setup

For an easy and secure setup solution for WiFi network, you can select PIN Code or Push Button methods to connect to an AP.

### Pin method:

#### Step 1:

Push the PIN button.

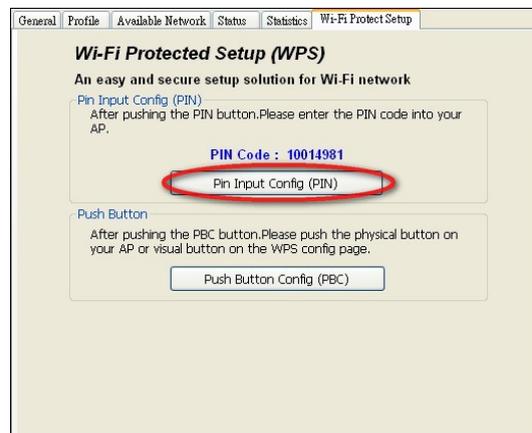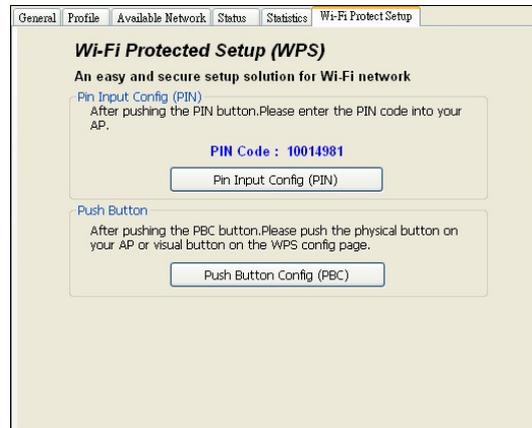

#### Step 2:

Select a specific AP

Then enter the PIN code into your AP.

### Wi-Fi Protected Setup

This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automatically synchronize its setting and connect to the Access Point in a minute without any hassle.

Disable WPS

WPS Status:  Configured  UnConfigured

Self-PIN Number:

Push Button Configuration:


Current Key Info:

Authentication	Encryption	Key
Open	None	N/A

Client PIN Number:

**Step 3:**

Select AP that you want to configure.

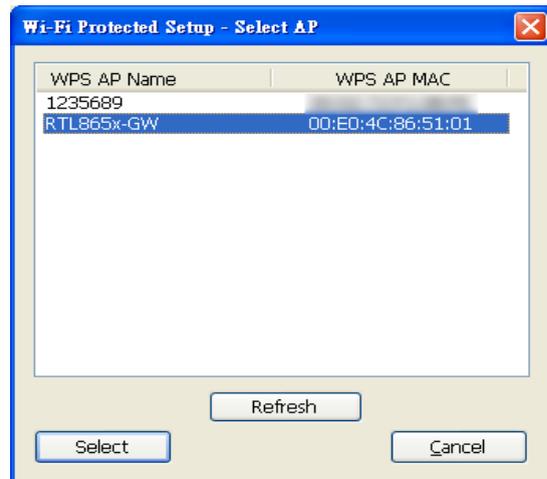

**Step 4:**


Wait for configuring your wireless AP to be the security setting.



**PBC method:**

**Step 1:**

Push the PBC button.

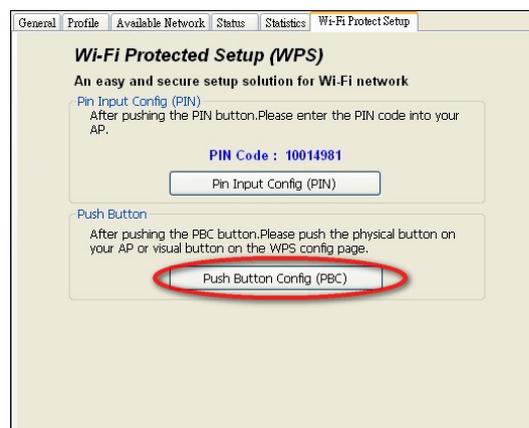

**Step 2:**

Push the physical button on your AP or visual button on the WPS config page.

**Wi-Fi Protected Setup**

This page allows you to change the setting for WPS (Wi-Fi Protected Setup). Using this feature could let your wireless client automatically synchronize its setting and connect to the Access Point in a minute without any hassle.

Disable WPS

WPS Status:  Configured  UnConfigured

Self-PIN Number:

Push Button Configuration:

Current Key Info:


Authentication	Encryption	Key
Open	None	N/A

Client PIN Number:

**Soft AP:**


**Step 1:**

Click **Access Point** to change AP mode

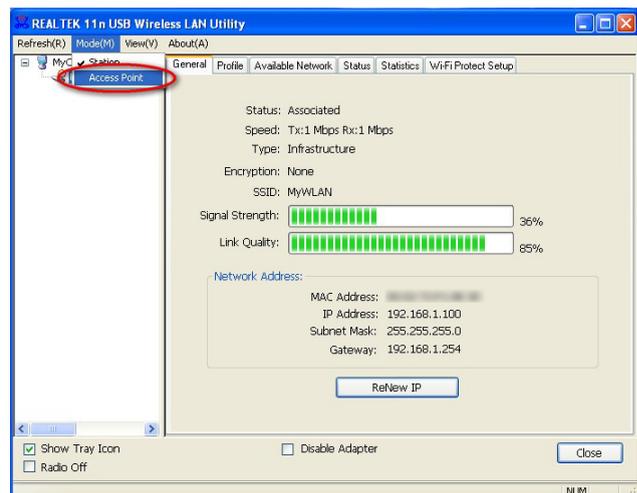


**Step 2 :**

Click **Config** to set AP.

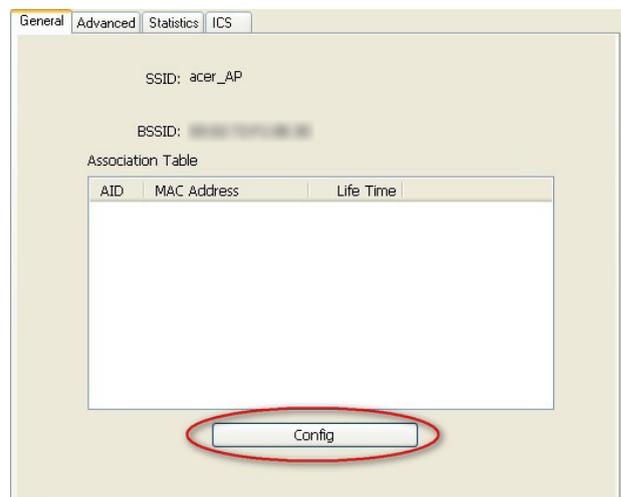


**Step 3:**

Setting SSID and Security

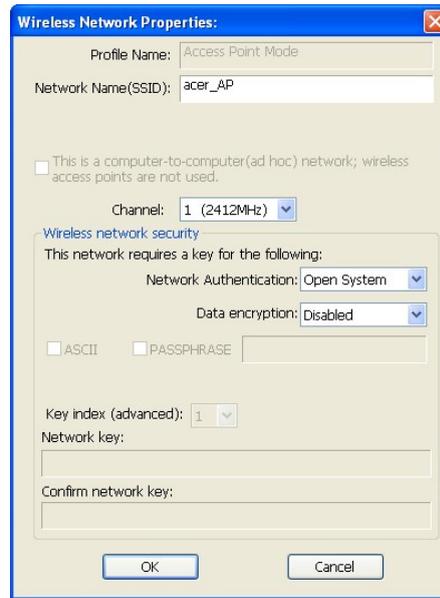

**Step 4:**

Select the Ethernet controller and click Apply (to bridge your Soft AP).

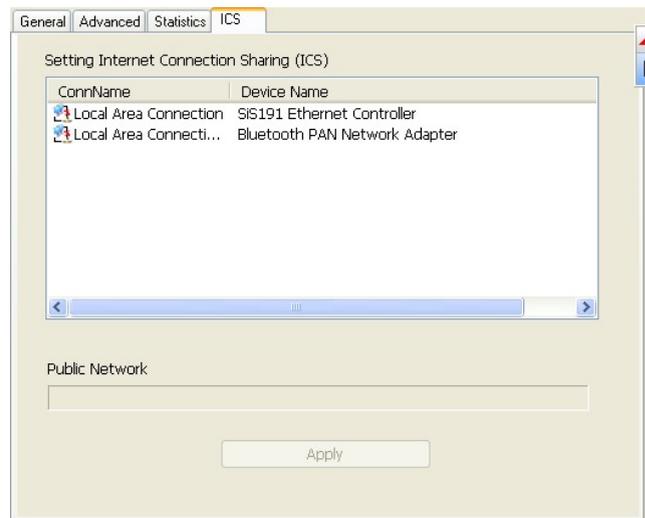

## 7. Certification Information

### 7.1. Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

#### REGULATION INFORMATION

The WiFi 802.11n adapter must be installed and used in strict accordance with the manufacturer's instructions. This device complies with the following radio frequency and safety standards.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

To comply with the FCC RF exposure compliance requirements, this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Your device contains a low power transmitter. When device is transmitted it sends out Radio Frequency (RF) signal. Use only with supplied antenna. Unauthorized antenna, modification, or attachments could damage the transmitter and may violate FCC regulations.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

## 7.2. Europe – CE/R&TTE Compliance Statement

Hereby, the company who declares that this equipment complies with the essential requirements and other relevant provisions of DIRECTIVE 1999/5/CE OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

### CE Declaration of Conformity

For the following equipment:

WiFi 802.11n adapter

\_\_\_\_\_  
(Product Name)

\_\_\_\_\_  
(Model Designation)

is herewith confirmed to comply with the requirements set out in the Council (European parliament) Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility of Radio and Telecom device (1999/5/EC). For the evaluation regarding this Directive, the following standards were applied:

EN 300 328 V1.7.1

EN 301 489-1 V1.6.1 ; EN 301 489-17 V1.2.1

EN 60950-1:2001

This equipment is marked with the  symbol and can be used throughout the European community. Marking by the symbol  indicates that usage restrictions apply.

France - 2.4GHz for Metropolitan France:

In all Metropolitan départements, wireless LAN frequencies can be used under the following conditions, either for public or private use:

- Indoor use: maximum power (EIRP\*) of 100 mW for the entire 2400-2483.5 MHz frequency band
- Outdoor use: maximum power (EIRP\*) of 100 mW for the 2400-2454 MHz band and with maximum power (EIRP\*) of 10 mW for the 2454-2483 MHz band

Caution: Exposure to Radio Frequency Radiation.

To comply with RF exposure compliance requirements, for mobile configurations, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.

This device is intended for use as check in the following European Community countries:

- |                                    |                                   |   |                                      |
|------------------------------------|-----------------------------------|---|--------------------------------------|
| <input type="checkbox"/> Austria   | <input type="checkbox"/> Belgium  | <input type="checkbox"/> Czech Republic | <input type="checkbox"/> Cyprus      |
| <input type="checkbox"/> Denmark   | <input type="checkbox"/> Estonia  | <input type="checkbox"/> France         | <input type="checkbox"/> Finland     |
| <input type="checkbox"/> Germany   | <input type="checkbox"/> Greece   | <input type="checkbox"/> Hungary        | <input type="checkbox"/> Ireland     |
| <input type="checkbox"/> Italy     | <input type="checkbox"/> Iceland  | <input type="checkbox"/> Luxemburg      | <input type="checkbox"/> Latvia      |
| <input type="checkbox"/> Lithuania | <input type="checkbox"/> Malta    | <input type="checkbox"/> Norway         | <input type="checkbox"/> Netherlands |
| <input type="checkbox"/> Portugal  | <input type="checkbox"/> Poland   | <input type="checkbox"/> Spain          | <input type="checkbox"/> Sweden      |
| <input type="checkbox"/> Slovakia  | <input type="checkbox"/> Slovenia | <input type="checkbox"/> United Kingdom |                                      |

The channel identifiers channel centre frequencies and regulatory domains of each 22-MHz-wide channel are shown in following Table.

Channel Identifier	Frequency (MHZ)	Regulatory Domains					
		Japan	ETSI	North America	Israel	France Outdoor	Mexico
1	2412	●	●	●		●	
2	2417	●	●	●		●	
3	2422	●	●	●	●	●	
4	2427	●	●	●	●	●	
5	2432	●	●	●	●	●	
6	2437	●	●	●	●	●	
7	2442	●	●	●	●	●	
8	2447	●	●	●	●	●	
9	2452	●	●	●	●	●	
10	2457	●	●	●			●
11	2462	●	●	●			●
12	2467	●	●				
13	2472	●	●				
14	2484	●					

## 8. Glossary

### **IEEE 802.11 Standard**

The IEEE 802.11 Wireless LAN standards subcommittee, which formulates a standard for the industry.

### **Access Point**

An internetworking device that seamlessly connects wired and wireless networks together.

### **Ad Hoc**

An Ad Hoc wireless LAN is a group of computers, each with a WLAN adapter, connected as an independent wireless LAN. Ad Hoc wireless LAN is applicable at a departmental scale for a branch or SOHO operation.

### **BSSID**

A specific Ad Hoc LAN is called a Basic Service Set (BSS). Computers in a BSS must be configured with the same BSSID.

### **DHCP**

Dynamic Host Configuration Protocol - a method in which IP addresses are assigned by a server dynamically to clients on the network. DHCP is used for Dynamic IP Addressing and requires a dedicated DHCP server on the network.

### **Direct Sequence Spread Spectrum**

This is the method the wireless cards use to transmit data over the frequency spectrum. The other method is frequency hopping. Direct sequence spreads the data over one frequency range (channel) while frequency hopping jumps from one narrow frequency band to another many times per second.

### **ESSID**

An Infrastructure configuration could also support roaming capability for mobile workers. More than one BSS can be configured as an Extended Service Set (ESS). Users within an ESS could roam freely between BSSs while served as a continuous connection to the network wireless stations and Access Points within an ESS must be configured with the same ESSID and the same radio channel.

### **Ethernet**

Ethernet is a 10/100Mbps network that runs over dedicated home/office wiring. Users must be wired to the network at all times to gain access.

### **Gateway**

A gateway is a hardware and software device that connects two dissimilar systems, such as a LAN and a mainframe. In Internet terminology, a gateway is another name for a router. Generally a gateway is used as a funnel for all traffic to the Internet.

**IEEE**

Institute of Electrical and Electronics Engineers

**Infrastructure**

An integrated wireless and wired LAN is called an Infrastructure configuration. Infrastructure is applicable to enterprise scale for wireless access to central database, or wireless application for mobile workers.

**ISM Band**

The FCC and their counterparts outside of the U.S. have set aside bandwidth for unlicensed use in the so-called ISM (Industrial, Scientific and Medical) band. Spectrum in the vicinity of 2.4 GHz, in particular is being made available worldwide. This presents a truly revolutionary opportunity to place convenient high-speed wireless capabilities in the hands of users around the globe.

**Local Area Network (LAN)**

A LAN is a group of computers, each equipped with the appropriate network adapter card connected by cable/air, that share applications, data and peripherals. All connections are made via cable or wireless media, but a LAN does not use telephone services. It typically spans a single building or campus.

**Network**

A network is a system of computers that is connected. Data, files, and messages can be transmitted over this network. Networks may be local or wide area networks.

**Protocol**

A protocol is a standardized set of rules that specify how a conversation is to take place, including the format, timing, sequencing and/ or error checking.

**SSID**

A Network ID is unique to a network. Only clients and Access Points that share the same SSID are able to communicate with each other. This string is case-sensitive.

**Static IP Addressing**

A method of assigning IP addresses to clients on the network. In networks with a Static IP address, the network administrator manually assigns an IP address to each computer. Once a Static IP address is assigned, a computer uses the same IP address every time it reboots and logs on to the network, unless it is manually changed.

**Temporal Key Integrity Protocol (TKIP)**

The Temporal Key Integrity Protocol, pronounced tee-kip, is part of the IEEE 802.11i encryption standard for wireless LANs. TKIP is the next generation of WEP, the Wired Equivalency Protocol, which is used to secure 802.11 wireless LANs. TKIP provides per-packet key mixing, a message integrity check and a re-keying mechanism, thus fixing the flaws of WEP.

**Transmission Control Protocol / Internet Protocol (TCP/IP)**

TCP/IP is the protocol suite developed by the Advanced Research Projects Agency (ARPA). It is widely used in corporate Internet works, because of its superior design for WANs. TCP governs how packet is sequenced for transmission the network. The term “TCP/IP” is often used generically to refer to the entire suite of related protocols.

**Transmit / Receive**

The wireless throughput in Bytes per second averaged over two seconds.

**Wi-Fi Alliance**

The Wi-Fi Alliance is a nonprofit international association formed in 1999 to certify interoperability of wireless Local Area Network products based on IEEE 802.11 specification. The goal of the Wi-Fi Alliance’s members is to enhance the user experience through product interoperability. The organization is formerly known as WECA.

**Wi-Fi Protected Access (WPA)**

The Wi-Fi Alliance put together WPA as a data encryption method for 802.11 wireless LANs. WPA is an industry-supported, pre-standard version of 802.11i utilizing the Temporal Key Integrity Protocol (TKIP), which fixes the problems of WEP, including using dynamic keys.

**Wide Area Network (WAN)**

A WAN consists of multiple LANs that are tied together via telephone services and / or fiber optic cabling. WANs may span a city, a state, a country, or even the world.

**Wired Equivalent Privacy (WEP)**

Now widely recognized as flawed, WEP was a data encryption method used to protect the transmission between 802.11 wireless clients and APs. However, it used the same key among all communicating devices. WEP’s problems are well-known, including an insufficient key length and no automated method for distributing the keys. WEP can be easily cracked in a couple of hours with off-the-shelf tools.

**Advanced Encryption Standard (AES)**

Security issues are a major concern for wireless LANs, AES is the U.S. government’s next-generation cryptography algorithm, which will replace DES and 3DE

### **Wireless LAN (WLAN)**

A wireless LAN does not use cable to transmit signals, but rather uses radio or infrared to transmit packets through the air. Radio Frequency (RF) and infrared are the commonly used types of wireless transmission. Most wireless LANs use spread spectrum technology. It offers limited bandwidth, usually under 11Mbps, and users share the bandwidth with other devices in the spectrum; however, users can operate a spread spectrum device without licensing from the Federal Communications Commission (FCC).

### **Fragment Threshold**

The proposed protocol uses the frame fragmentation mechanism defined in IEEE 802.11 to achieve parallel transmissions. A large data frame is fragmented into several fragments each of size equal to fragment threshold.

By tuning the fragment threshold value, we can get varying fragment sizes.

The determination of an efficient fragment threshold is an important issue in this scheme. If the fragment threshold is small, the overlap part of the master and parallel transmissions is large. This means the spatial reuse ratio of parallel transmissions is high. In contrast, with a large fragment threshold, the overlap is small and the spatial reuse ratio is low. However high fragment threshold leads to low fragment overhead. Hence there is a trade-off between spatial re-use and fragment overhead.

Fragment threshold is the maximum packet size used for fragmentation.

Packets larger than the size programmed in this field will be fragmented. If you find that your corrupted packets or asymmetric packet reception (all send packets, for example). You may want to try lowering your fragmentation threshold. This will cause packets to be broken into smaller fragments. These small fragments, if corrupted, can be resent faster than a larger fragment. Fragmentation increases overhead, so you'll want to keep this value as close to the maximum value as possible.

### **RTS (Request To Send) Threshold**

The RTS threshold is the packet size at which packet transmission is governed by the RTS/CTS transaction. The IEEE 802.11-1997 standard allows for short packets to be transmitted without RTS/CTS transactions. Each station can have a different RTS threshold. RTS/CTS is used when the data packet size exceeds the defined RTS threshold. With the CSMA/CA transmission mechanism, the transmitting station sends out an RTS packet to the receiving station, and waits for the receiving station to send back a CTS (Clear to Send) packet before sending the actual packet data. This setting is useful for networks with many clients. With many clients, and a high network load, there will be many more collisions. By lowering the RTS threshold, there may be fewer collisions, and performance should improve. Basically, with a faster RTS threshold, the

system can recover from problems faster. RTS packets consume valuable bandwidth, however, so setting this value too low will limit performance.

### **Beacon Interval**

In addition to data frames that carry information from higher layers, 802.11 includes management and control frames that support data transfer. The beacon frame, which is a type of management frame, provides the "heartbeat" of a wireless LAN, enabling stations to establish and maintain communications in an orderly fashion. Beacon Interval represents the amount of time between beacon transmissions. Before a station enters power save mode, the station needs the beacon interval to know when to wake up to receive the beacon (and learn whether there are buffered frames at the access point).

### **Preamble Type**

There are two preamble types defined in IEEE 802.11 specification. A long preamble basically gives the decoder more time to process the preamble. All 802.11 devices support a long preamble. The short preamble is designed to improve efficiency (for example, for VoIP systems). The difference between the two is in the Synchronization field. The long preamble is 128 bits, and the short is 56 bits.

### **WPA2**

It is the second generation of WPA. WPA2 is based on the final IEEE 802.11i amendment to the 802.11 standard.

### **Temporal Key Integrity Protocol (TKIP)**

The Temporal Key Integrity Protocol, pronounced tee-kip, is part of the IEEE 802.11i encryption standard for wireless LANs. TKIP is the next generation of WEP, the Wired Equivalency Protocol, which is used to secure 802.11 wireless LANs. TKIP provides per-packet key mixing, a message integrity check and a re-keying mechanism, thus fixing the flaws of WEP.

### **802.1x Authentication**

802.1x is a framework for authenticated MAC-level access control, defines Extensible Authentication Protocol (EAP) over LANs (WAPOL). The standard encapsulates and leverages much of EAP, which was defined for dial-up authentication with Point-to-Point Protocol in RFC 2284. Beyond encapsulating EAP packets, the 802.1x standard also defines EAPOL messages that convey the shared key information critical for wireless security.